



PACKERS

PACKERS

The packers are used for injecting fluid cement into the ground ensuring underground saturation and a correct formation of the micropile, as they allow pressurisation of the cement around any cracks. The rubber seals diameter, which adhere on the micropile side, are available from $\varnothing 58$ up to $\varnothing 99$

DIMENSION

KIT = N°4 INERT RUBBER

$\varnothing 58$

$\varnothing 68$

$\varnothing 78$

$\varnothing 88$

$\varnothing 99$



Zoom



 Zoom



 Zoom